


**Refrigerators, Pharmacy/Vaccine Premium (+5°C)**

**AUSTRALIAN MADE**



**TPR-950-2-GD**

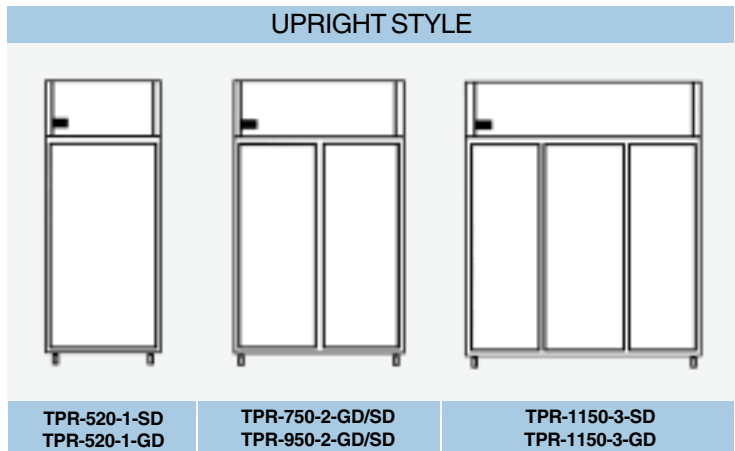

**Product Features**

Four premium models of specialty pharmacy/vaccine refrigerators are available up to 1150 Litres to accommodate the requirements of retail pharmacies, medical centres, hospitals and universities where pharmacy/vaccine products are required to be stored safely.

Temperature is precisely controlled electronically at +5°C in ambient up to 32°C. Temperature accuracy is ±1°C. The digital display incorporates hi (+8°C) and low (+2°C) temperature alarms, which emit visual and audible signals to warn the operator of an alarm condition. Connection to a building management system (BMS) has been made easy on the premium range, as they are supplied with voltage free contacts to allow connection for remote monitoring of power loss, low and high alarms.

Cabinet construction is grey Colorbond exterior with interior finish of stainless steel floor and white Colorbond walls. Insulation is high efficiency injected polyurethane foam. All models are available with either glass or solid self closing doors, with key locks on doors for security.

A low temperature, protective cut out (LTPC) can be fitted as an optional extra to prevent products inside the refrigerator from freezing (particularly important for the storage of vaccines). This independent device will turn off the refrigeration system should the control fail in cooling mode.

Premium Pharmacy / Vaccine Refrigerators incorporate the following features:

- Internal Forced Air Flow
- Digital Temperature Display with Alarms
- Max/Min Temperature Logging
- BMS (Voltage free contacts allow connection for remote monitoring of power loss, low and high temperature alarms)
- Internal Light (glass door cabinets only)
- Cable Port (on side of cabinet)
- Frost Free Operation
- CFC Free Refrigerant
- Adjustable/Removable Shelves
- Lockable doors

**OPTIONS:**

*Additional Shelving*  
*Phone Dialler (TPD-1) Analogue Line Only.*  
*Chart Recorder (TCR-115)*  
*Automatic one push of a button procedure to raise and lower the sensor temperature to test the high/low alarms. (T-AT) See page R-2 for full details of this feature.*  
*Power Guard, offering protection against Low Voltage, High Voltage Spikes.*  
*(LTPC) Low temperature protective cut out*

ORDER CODE	DIM. INT HxWxD cm	LITRES CAPACITY	DIM. EXT HxWxD cm	SHELVES	ELECTRICAL 240V 50Hz	PACKED WEIGHT Kg
<b>TPR-520-1-GD/SD*</b>	146x58x56	520	200x72x72	4	3A	180
<b>TPR-750-2-GD/SD*</b>	146x85x56	750	200x100x72	4	3A	270
<b>TPR-950-2-GD/SD*</b>	146x112x56	950	200x123x72	4	4A	320
<b>TPR-1150-3-GD/SD*</b>	146x131x56	1150	200x147x72	4	4A	380

(\*) When ordering quote SD for Solid Door or GD for Glass Door.